



BEFORE MAKING ANY ADJUSTMENT TO THE HINGES

Be sure to anchor the top hinge to the wall stud with a 3" screw.
See door installation instructions for more details.

FOR HORIZONTAL ADJUSTMENTS

Examine the reveal (space between door panel and frame) around the perimeter of your door panel. Use the Horizontal adjustment to correct clearance issues between the sides of the panel and the frame.



1
Loosen set screws B & C of bottom knuckle with 2.5 mm Allen key.



2
Make adjustment at bottom with 4 mm Allen key through the bottom screw.



3
Tighten both set screws with 2.5 mm Allen key.

FOR VERTICAL ADJUSTMENTS

Use the Vertical adjustment to correct positioning issues where the door panel is too low or too high. Select one hinge to start with, position the panel as needed and then adjust the other hinges to match.



Loosen set screws B & C of bottom knuckle with 2.5 mm Allen key.



Make adjustment up & down with 5 mm Allen key. CW=Up CCW=Down



Tighten both set screws with 2.5 mm Allen key.