


Adjustable 3-Way Hinge

FACING LEFT HINGE SIDE SHOWN

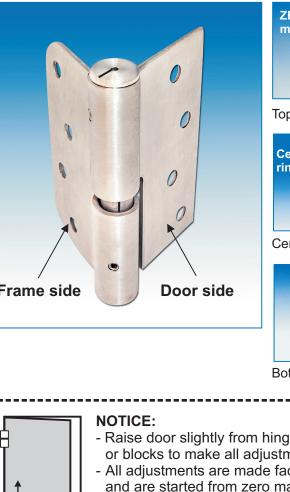



Top view



Center view



Bottom view


Ĥ


PRY BAR

 
Frame side

- Raise door slightly from hinge side with pry bar or blocks to make all adjustments.
- All adjustments are made facing hinge side and are started from zero marks.
- Retighten set screws after each adjustment.
- Facing hinge side, doors with hinges mounted on left will be adjusted clockwise (as shown), doors with hinges mounted on right will be adjusted counter clockwise (not shown).

UP & DOWN ADJUSTMENT (HEIGHT)

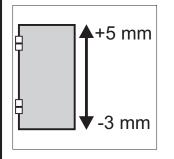

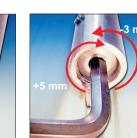



Make adjustment up & down with 5 mm Allen key. *Clockwise +5 mm *Counter clockwise -3 mm

Raise +5 mm


Lower -3 mm



Tighten both set screws with 2,5 mm Allen key.

SIDEWAYS ADJUSTMENT (WIDTH)

FACING LEFT HINGE SIDE SHOWN

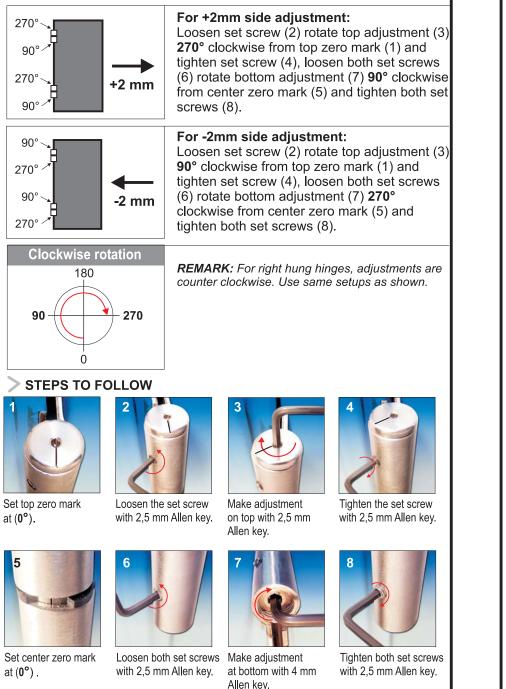

COMPRESSION ADJUSTMENT (IN & OUT)

FACING LEFT HINGE SIDE SHOWN

