


Multi-point Gear Operation Instructions

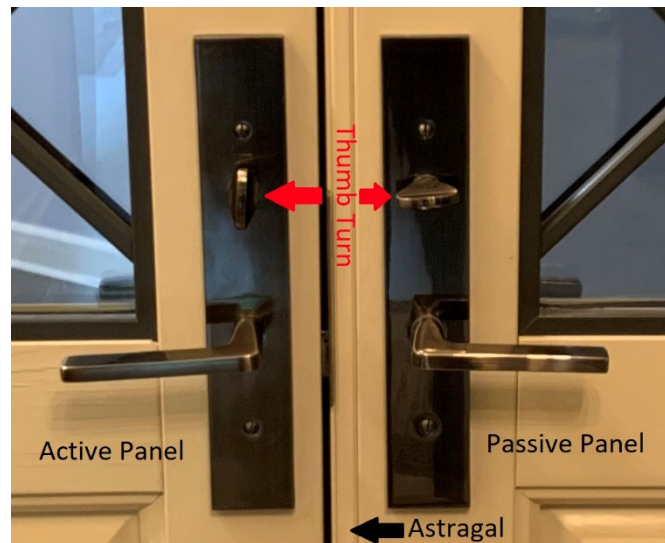

View from Interior

The Active Panel is the operating panel that is most frequently used. The Passive Panel mostly remains closed and has the Astragal attached to it. The Active Panel must first be opened before the Passive Panel can be opened. The Passive Panel can be opened once the hardware has been disengaged.

Unlocking and Opening Panels

1. Unlock the Active Panel by turning the thumb turn to vertical position (as shown in image) to disengage the deadbolt
2. Push down on the handle and open the Active Panel
3. Unlock the Passive Panel by turning the thumb turn to vertical position
4. Push down on the handle to disengage the hardware from the head and sill of the door and open the Passive Panel

Closing and Locking Panels

1. Close the Passive Panel
2. Lift up on the Passive Panel Handle to engage hardware into the slot in the head and sill of the door and
3. Turn thumb turn to a horizontal position to lock the Passive Panel
4. Close Active Panel
5. Turn thumb turn to vertical position on the Active Panel to lock engage the deadbolt into the Passive Panel