




RIGHT HAND PART NUMBER	LEFT HAND PART NUMBER	CALL SIZE	O. A. "A"
		6-8	77.033
		6-11	80.033
		8-0	93.033

"A" = Panel Size
ALL TOLERANCES ±.015
UNLESS NOTED

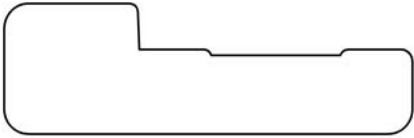

Keeper Installation Instructions

- 1: Install foot bolt using the provided template on this page. Foot bolt mounts to the Operating Panel End Cap.
- 2: Install foot bolt first
- 3: Close door and lock
- 4: Activate foot bolt to make indention into the wood on the stationary panel.
- 5: While foot bolt is still activated, attach keeper using screws provided. The first semi circle should go over the foot bolt.
- 6: Mark the semi circles with a pencil
- 7: Remove keeper
- 8: Drill a 3/8 hole, 1/2" deep at both semi circle locations
- 9: Re-Apply keeper

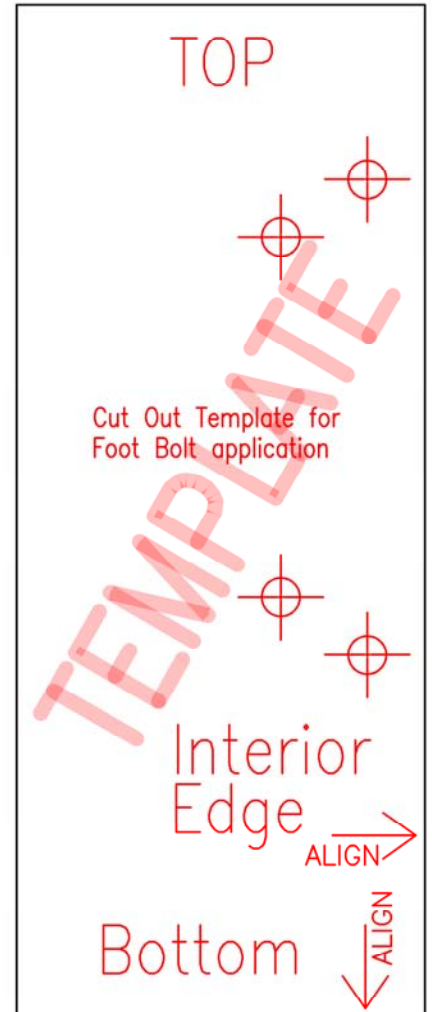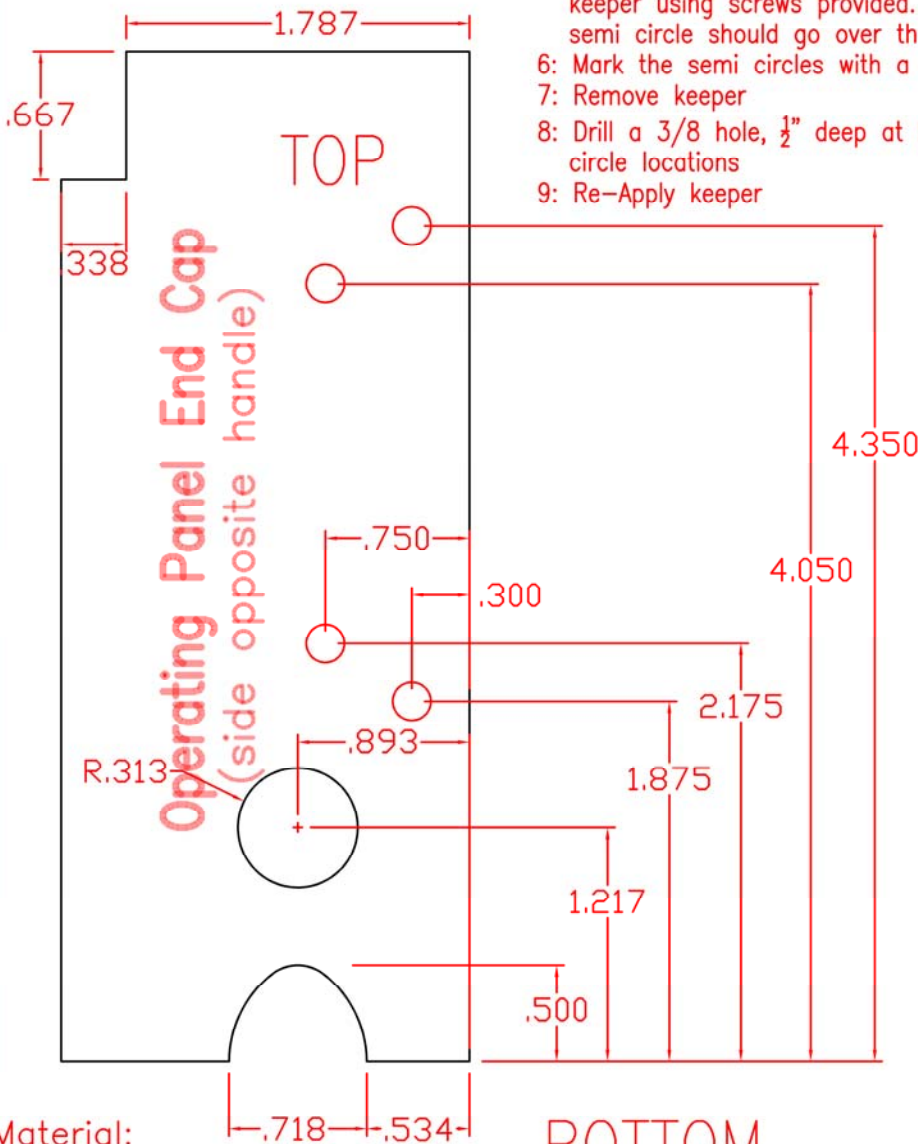

Material:
#1 Clear Ponderosa Pine
-IS-4 Treated

BOTTOM

Left HAND SHOWN

THIS DRAWING IS SOLE PROPERTY OF Sun Windows, INC. ALL INFORMATION IS CONFIDENTIAL AND MAY NOT BE DUPLICATED OR TRANSMITTED WITHOUT PERMISSION OF THE COMPANY.

#	DATE	ECN	REVISION	BY



1515 E. 18th St. P: 270-684-0691
Owensboro, KY F: 270-926-8452

BOOK:	SECTION:	CLASS:	DRAWN BY:	DATE:	SIZE:
PD	Sliding	Wood Fab	Aaron A.	6/20/16	A
TITLE:			CHECKED:	DATE:	A
Operating Panel End Cap					
Fab. for USA Sliding Door(Footbolt Applic.)			SCALE:	SHEET:	
			Full	1 OF: 1	
TOLERANCE UNLESS NOTED OTHERWISE:			DRAWING NUMBER:		REVISION:
DECIMAL: +/- 0.015" FRACTIONAL: +/- 1/64" ANGULAR: +/- 0.5°			OWPD-017-1		