



STEP 1

MEASURE DOOR THICKNESS.

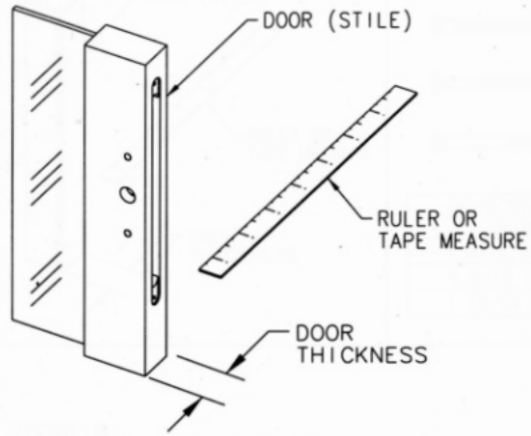

STEP 2

DETERMINE THE PROPER LENGTH OF MOUNTING SCREWS.

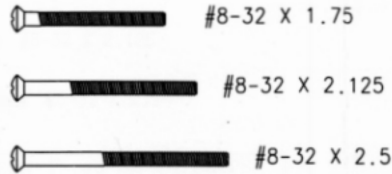

DOOR THICKNESS RANGE	#8-32 PHILLIPS SCREW LENGTH
1 3/16 TO 1 9/16	1.750
1 9/16 TO 1 15/16	2.125
1 15/16 TO 2 5/16	2.500


TRUTH HARDWARE
 Truth Hardware
 an FKI Industries company
 700 West Bridge Street
 Owatonna, MN 55060
 Telephone 507-451-5620

INSTALLATION INSTRUCTIONS

HANDLES, KEEPERS AND OTHER COMPONENTS MAY NOT BE AN EXACT MATCH WITH WHAT YOU ARE INSTALLING BUT THE INSTALLATION PROCEDURE IS BASICALLY THE SAME.


STEP 5

BREAK OFF TAIL ENDS WITH PLIERS

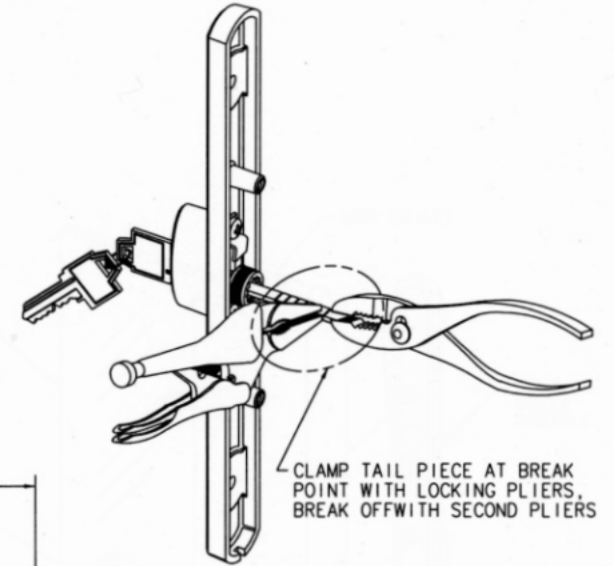


STEP 3

LOCK CYLINDER / ESCUTCHEON ASSEMBLY

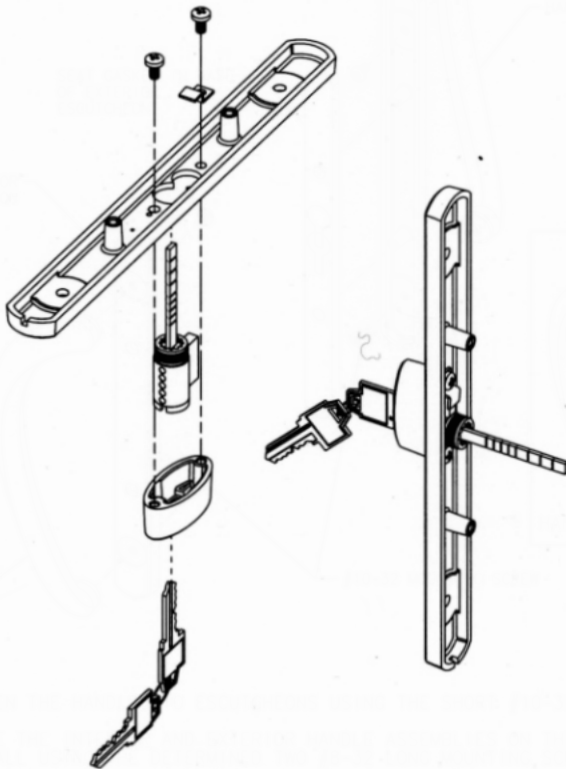

STEP 4

SIZE TAIL PIECES TO SUIT DOOR THICKNESS

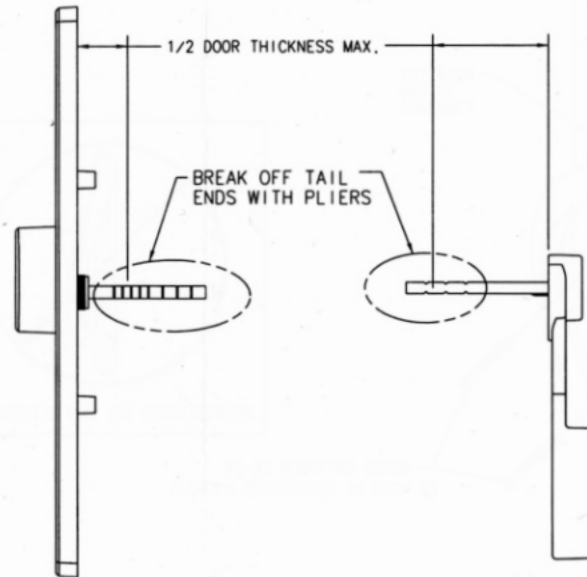

DETERMINING TAIL PIECE BY FINDING BREAK MARK CLOSEST TO 1/2 DOOR THICKNESS MAX.